



Footbolt Security Lock Installation

LINCOLN SLIDING PATIO DOORS

TOOLS REQUIRED: Safety Glasses, Tape Measure, Pencil, Phillips Head Screw Driver, Drill, 3/32" Wood Drill Bit.

1. Move the operable panel into the closed and locked position. The footbolt will need to be mounted to the face of the operable panel where they meet the passive panel.
2. Place Footbolt (centered horizontally) on the stile about 5/8" above the sill stop (Figure 1).
3. Mark the holes to be pre-drilled with a pencil and pre-drill holes using the drill and 3/32" wood drill bit (Figure 1).
5. Fasten Footbolt with the provided #8 x 1-1/2" Pan Head Wood Screws (Figure 2). **DO NOT OVER TIGHTEN.**
6. Place keeper under footbolt (Figure 3).
7. Mark the holes for pre-drilling and pre-drill with a 3/32" wood drill bit (Figure 3).
9. Fasten Keeper with provided #8 x 3/4" Flat Head Wood Screws (Figure 4). **DO NOT OVER TIGHTEN.**

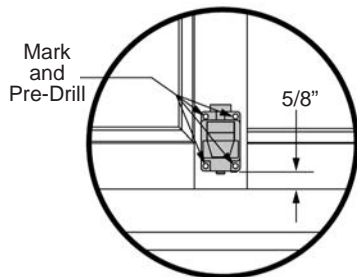


Figure 1

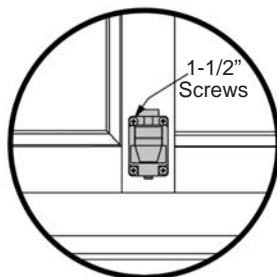


Figure 2

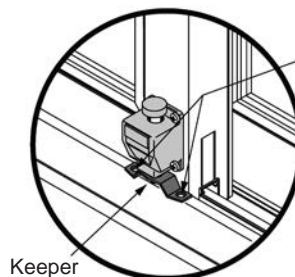


Figure 3

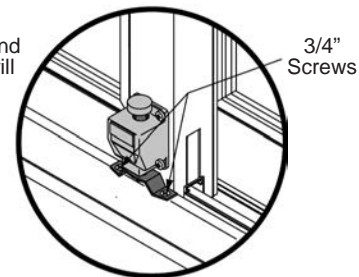


Figure 4